




SOLENOID DISASSEMBLY GUIDE

MAINTENANCE AND OPERATION GUIDE

BEFORE BEGINNING

MAKE SURE TO TURN OFF AND UNPLUG THE
MISTING SYSTEM AND GATHER YOUR TOOLS.

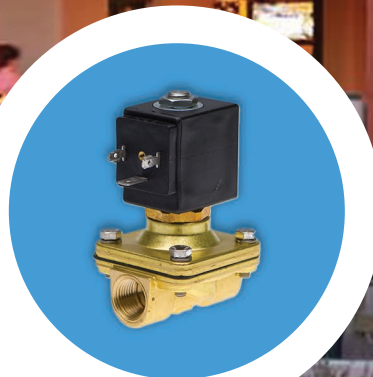

1 Remove Black Solenoid Coil -
Detach the solenoid coil from the
valve body.



**2 Remove the 4 Screws to
Access Diaphragm -** Unscrew the
four screws to open the valve body.



3 Inspect and Clean Diaphragm
- Check the diaphragm for clogs or
wear, clean or replace as needed.



4 Reassemble and Test -
Reattach solenoid components
securely. Test system for leaks and
proper function.



TOOLS NEEDED

- SOLENOID VALVE
- ADJUSTABLE WRENCH
- HEX DRIVER (#4)