



QUICK START GUIDE

MAINTENANCE AND OPERATION GUIDE

1 Water Supply - Ensure that the water valve is open at all times. This has already been set up, so just keep the valve open.




2 Power Supply - The power must be running at all times to ensure the misting system functions properly.



3 System Operation - Locate the Toggle Switch (on the side on Pulley Pumps). The switch should be in the On (Up) position (Up is Off on the Pulley Pump).



4 System Check -
Pressure Gauge: Check the gauge to ensure it reads 1000 PSI for optimal performance.
Red Cap: A red cap will be installed on the system. It is best to keep this cap on at all times to ensure the system remains clean and protected.

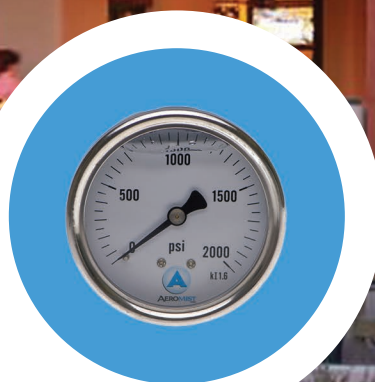

WE RECOMMEND CHANGING YOUR OIL/FILTER ON

OR AFTER EVERY 500 RUNNING HOURS.



Scan For Video
Instructions

