



INSTALLATION

AUTOMATIC DRAIN VALVE

1 Cut the Nylon Tubing - Cut your high-pressure nylon tubing coming out of your pump approximately 4 inches from the compression nut.




2 Insert the Brass Nozzle Union - Insert the brass nozzle union into both sides of the cut tubing until the fitting bottoms out into the tubing.



3 Tighten the Fittings - Use two adjustable wrenches to tighten both ends of the fitting onto the nylon tubing that you cut. Ensure the threaded end is pointing downward.



4 Insert the Brass Nozzle Drain Valve - Hand tighten the drain valve into the union.

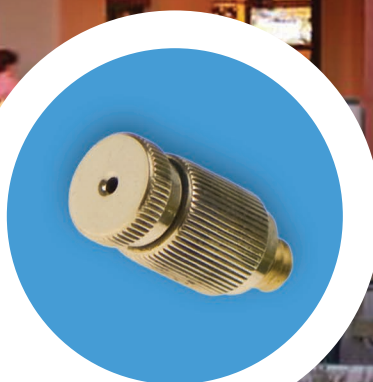

TOOLS NEEDED

- HIGH PRESSURE NYLON TUBING
- BRASS NOZZLE UNION (SKU: 54000)
- BRASS NOZZLE DRAIN VALVE (SKU: 52000)
- ADJUSTABLE WRENCHES X2

THAT'S IT!

Your Drain Valve is ready for use. Be sure to turn on your system and check for leaks before enjoying.